 





## Dovetail nipples

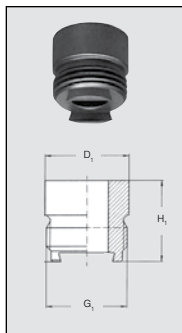

For series	Ordering no.			Dimensions (in.)				Weight (Brass) lb.	
	Type	Material no.			For thread G <sub>1</sub>	H <sub>1</sub>	D <sub>1</sub>		Hex
		303 SS 16	316 SS 17	Brass 30					
660	<b>066. 011</b>	-	○	-	3/8" BSPP	.71	.65	-	.05
664/665	<b>066. 410</b>	-	○	-	3/4" BSPP	1.06	1.10	-	.14


**Example**    Type    +    Material no.    =    Ordering no.  
**for ordering:**    066. 410    +    17    =    066. 410. 17
 
## Retaining nuts

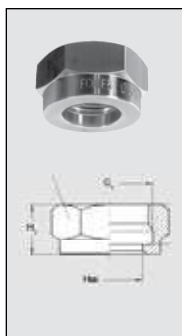

For series	Ordering no.			Dimensions (in.)				Weight (Brass) lb.	
	Type	Material no.			For thread G <sub>1</sub>	H <sub>1</sub>	D <sub>1</sub>		Hex
		303 SS 16	316 SS 17	Brass 30					
660	<b>065. 200</b>	○	○	○	3/8" BSPP	.51	-	1/2"	.06
664/665	<b>065. 600</b>	○	○	○	3/4" BSPP	.51	-	1 1/4"	.13

 **Example**    Type    +    Material no.    =    Ordering no.  
**for ordering:**    065. 200    +    17    =    065. 200. 17

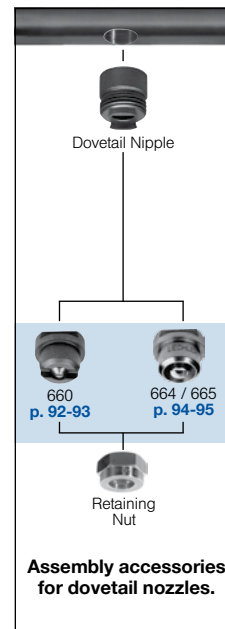

Dovetail nozzles have an automatic alignment guide which requires a matching dovetail base. Once the base is set, the nozzle can be removed and replaced without need to readjust the alignment. Nozzle is secured to the base with a retaining nut.